






 


Assembly Instructions  
**MODEL NO.: N169**  
 GALLERY DESK

TUNING/1	TUNING/2	TUNING/3	TUNING/4	TUNING/5	TUNING/6	TUNING/7
<b>A</b>  Cam Lock 2PCS	<b>B</b>  Wix Cam 2PCS	<b>C</b>  Cover 1PCS	<b>D</b>  Adjustable Glue 4PCS	<b>E</b>  8 Hole L-Bracket 1PCS	<b>F</b>  Screw 4x1/2" 1PCS	<b>G</b>  80mm Black Corner 1PCS

**STEP1**



**IMPORTANT:**

**FUNCTION OF PLUS SIGN**




1/4 TURN  
TURN FOR  
LOCKING


WAX CAM TO BE USED IN  
 ROTATING POSITION.  
 ALWAYS INDICATING PLUS  
 OR MINUS TO LOCK.



**STEP2**

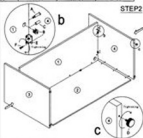

**STEP3**

 

COMPLETED ASSEMBLY

**IMPORTANT NOTE:**

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.