
Assembly Instructions

MODEL NO.N105

DESK SHELL

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG
A	B	C	D	E	F	G	H
Cam lock 14Pcs+1Pc(spare)	Klix Cam 14Pcs+1Pc(spare)	Cam Cover 19Pcs+1Pc(spare)	Dowel 9Pcs+1Pc(spare)	Adjustable Glide 4Pcs	6Hole L-Bracket 5Pcs	Screw#4*5/8" 30Pcs+1Pc(spare)	80mm Black Grommet 2 Pcs

STEP1

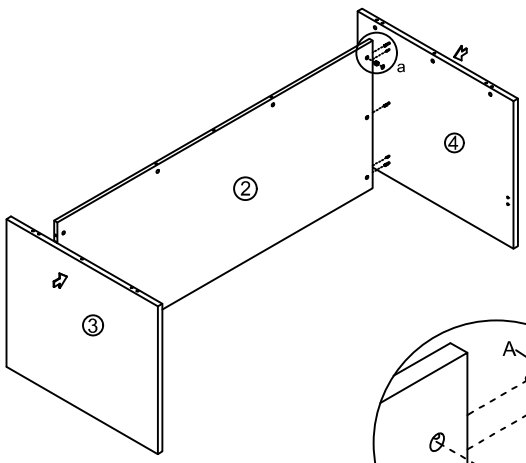


IMPORTANT:
FUNCTION OF KLIX CAM




1/4 RIGHT TURN FOR LOCKING


Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole

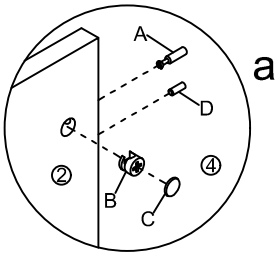

STEP2

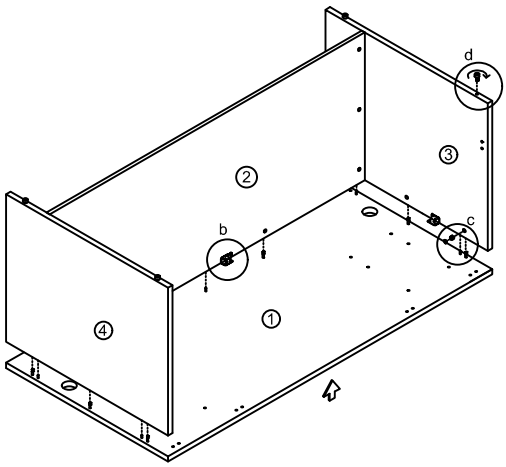


STEP3

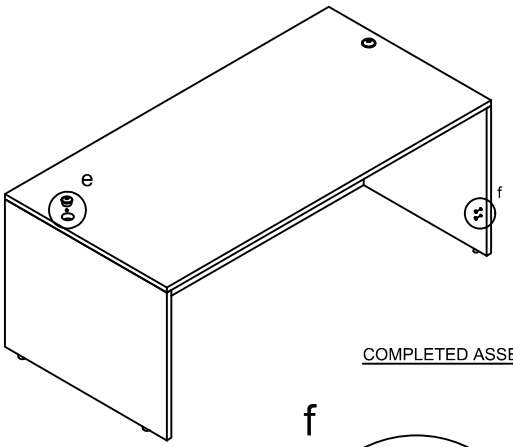


COMPLETED ASSEMBLY


b

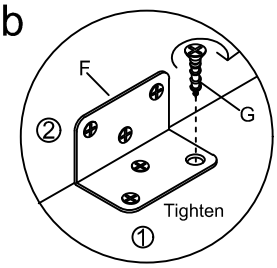


c

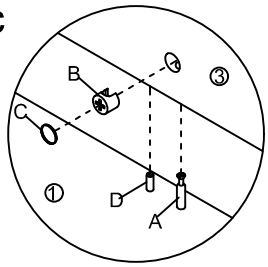


e

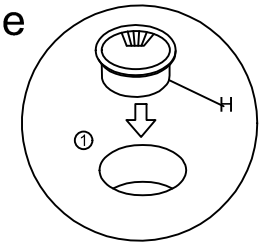


f

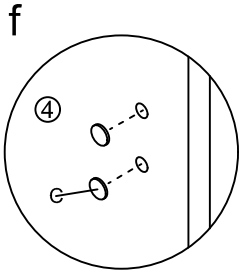

d

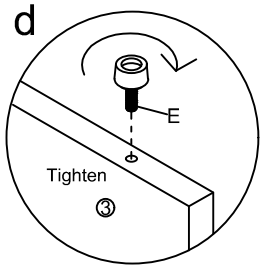

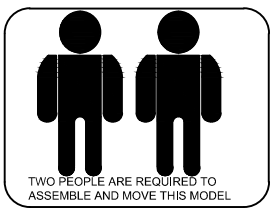

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com