


Assembly Instructions
MODEL NO.:N147

Stair Desk



8/18

TUN003	TUN004	TUN010	TUN006	TUN005	TUN002	TUN008
Cam Lock PCS	Rite Cam PCS	Cover PCS	Adjustable Gide PCS	8 Hole L-Bracket PCS	Screw 40*12 PCS	Screw 40*12 PCS

STEP1



STEP2

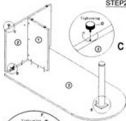

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.