


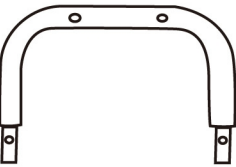







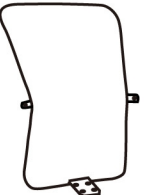


Please unscrew all hardware from cushion before assembly.
Por favor de destornillar todos los tornillos del cojín antes de ensamblar la silla.

MODEL : B6509 B6609 B6709

(1)x1  Back Cushion	(2)x1  Seat Cushion	(3)x1  Connecting Bar
(4)x1  U connecting Bar	(5)x1  Right & Left Frame	(6)x1


- (A)x4  M6 X 14 Frame Screws
- (B)x4  M6 X 25 Frame to Seat Screws
- (C)x2  M8 X 25 Back Screws
- (D)x4  M6 X 25 Back to Seat Screws
- (E)x1  ALLEN KEY
- (F)x1  ALLEN KEY

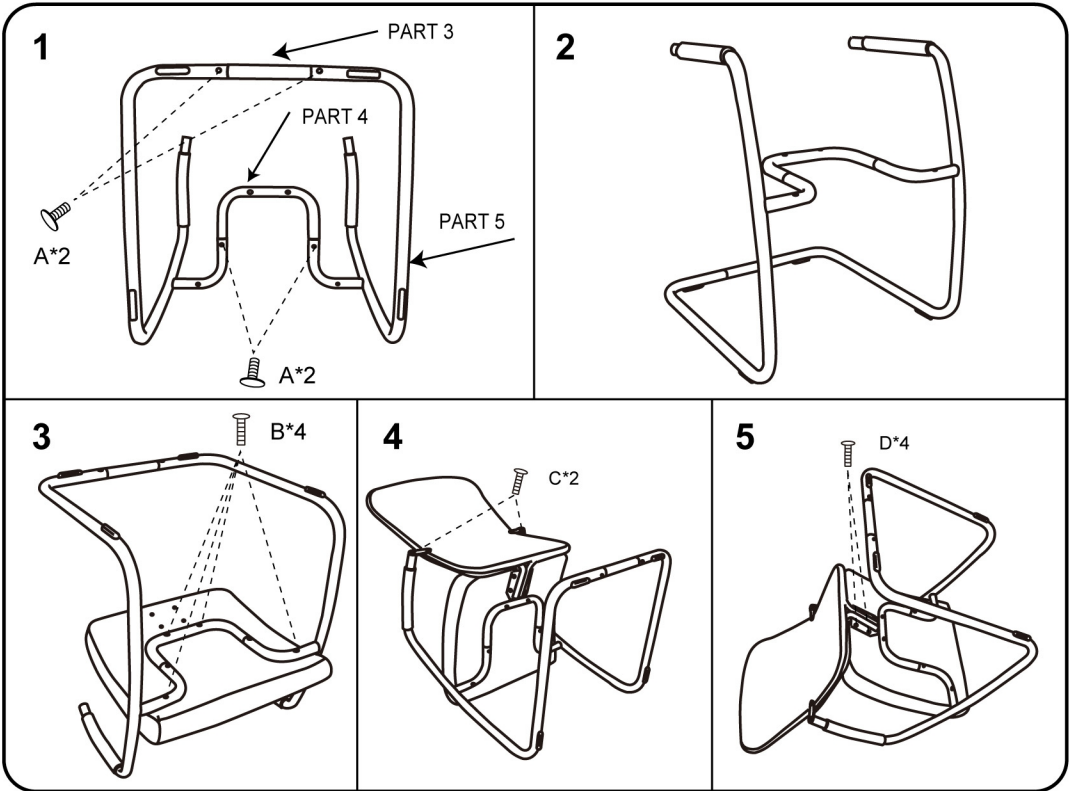

Do not tighten bolts fully until you have completed assembly.



Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

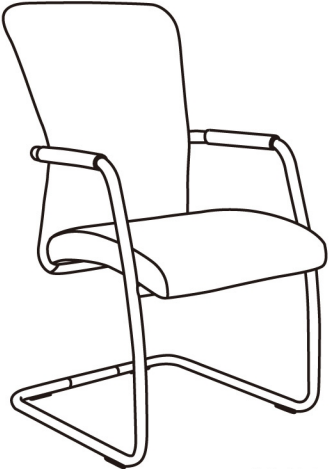

Customer Service Hotline: 1-800-593-1888
For further assembly instructions, please visit our website at www.bosschair.com