






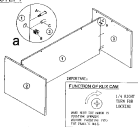



Assembly Instructions
MODEL NO.: N189
 ROW FRONT DESK SHELL

ITEM NO.	ITEM I/C	ITEM I/C	ITEM I/C	ITEM I/C	ITEM I/C	ITEM I/C	
A		B		C		D	
Cam Lock 14/16x2 (Pcs)	File Cam 14/16x2 (Pcs)	Screw 14/16x2 (Pcs)	Adjustable Glue 4/16x2	E	F	G	
							
				L-Bracket 2/16x2 (2Pcs)	Screw 14/16x2 (2Pcs)	Drive Back Connector 2/16x2 (2Pcs)	


STEP 1



STEP 2

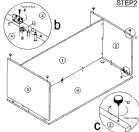

STEP 3

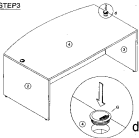

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing slips before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.