




IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

MODEL: B676

(1)x1	(2)x1	(3)x1 (L)x1 (R)
 Back Cushion	 Seat Cushion	 Left- Arm Right- Arm
(4)x 1	**(5)x1**	**(6)x1**
 Mechanism	 Gas Lift	 Base
(7)x 5		
 Casters		

(A)x4		M6*22 MECHANISM SCREW
(B)x8		M6*40 ARM SCREW
(C)x2		M6*35 BACK SCREW
(D)x1		ALLEN KEY

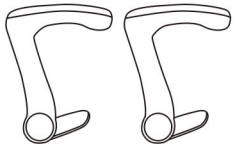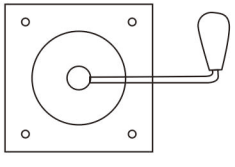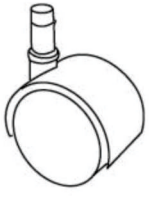

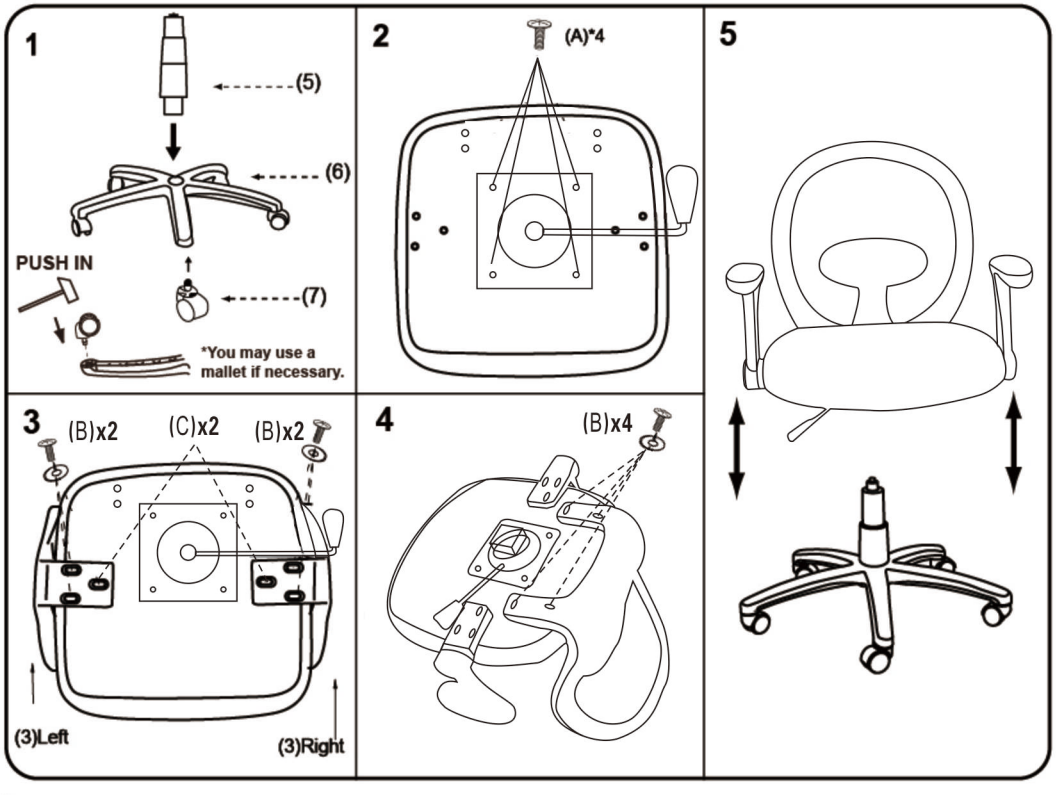



Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

