



Assembly Instructions

MODEL NO.N101

DESK SHELL

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	
A	B	C	D	E	F	G	H	I
								
Cam lock 14Pcs+1Pc(spare)	Klix Cam 14Pcs+1Pc(spare)	Cam Cover 14Pcs+1Pc(spare)	Dowel 9Pcs+1Pc(spare)	Adjustable Glide 4Pcs	6Hole L-Bracket 5Pcs	Screw#4*5/8" 30Pcs+1Pc(spare)	60mm Black Grommet 2 Pcs	Cover 4Pcs+1Pc(Spare)

STEP1

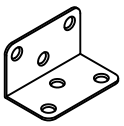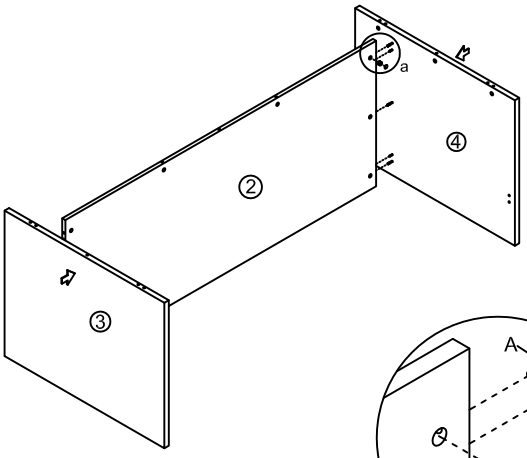


IMPORTANT:
FUNCTION OF KLIX CAM




1/4 RIGHT
TURN FOR
LOCKING


Make Sure The Arrow Is
Pointing Upwards Before
Inserting Into The Panel's Hole

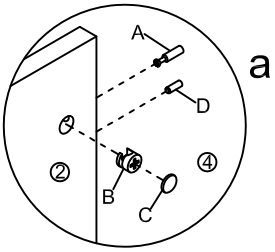

STEP2

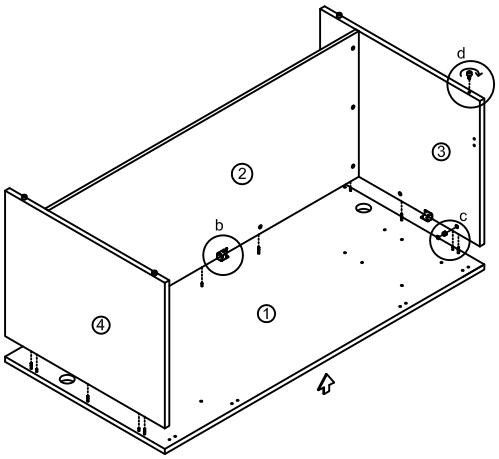


STEP3

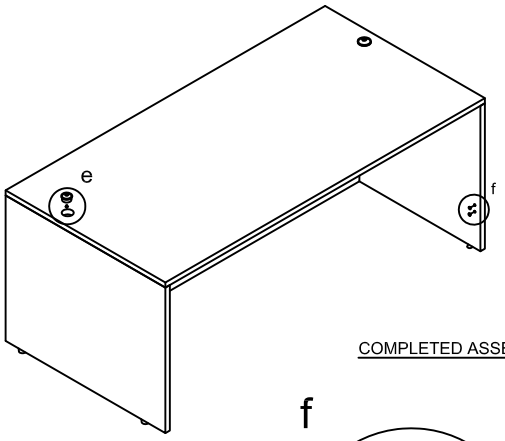


COMPLETED ASSEMBLY


b

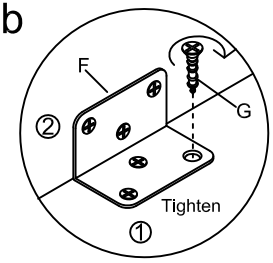


c

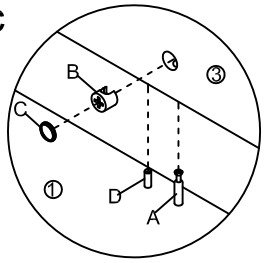


e

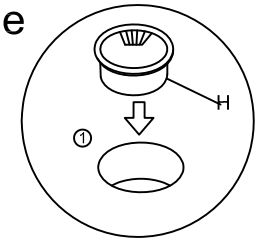


f

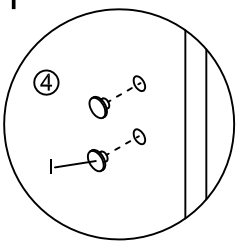

d

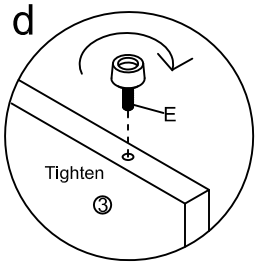

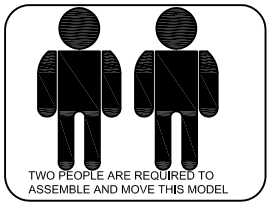




IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com


Assembly Instructions


MODEL NO.:N170

BRIDGE


TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	TUN019IB
A  Cam Lock 4Pcs+1Pc(spare)	B  Klix Cam 4Pcs+1Pc(spare)	C  Dowel 2Pcs+1Pc(spare)	D  Adjustable Glide 2Pcs	E  6 Hole L-Bracket 2Pcs	F  Screw #4*5/8" 48Pcs+7Pcs(spare)	G  80mm Black Grommet 2Pcs	H  I-Bracket 6Pcs

STEP1

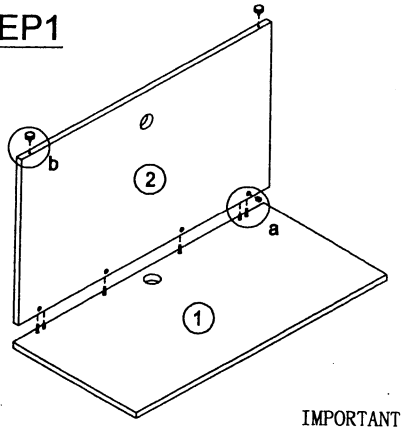

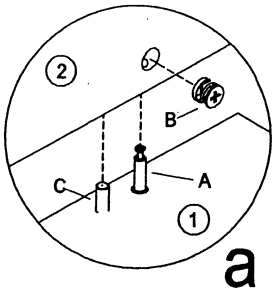


a

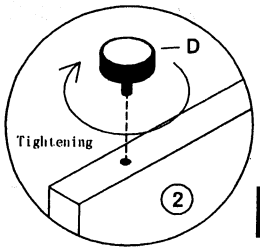

b

IMPORTANT:


FUNCTION OF KLIX CAM




1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL'S HOLE.

STEP2

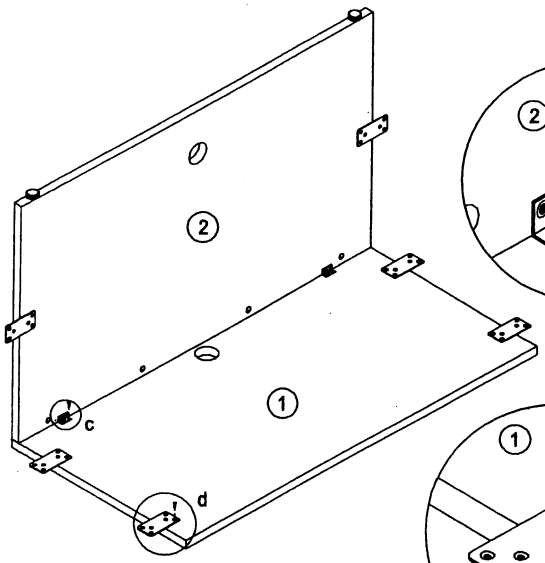

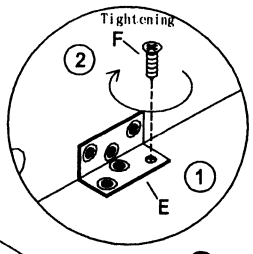


c

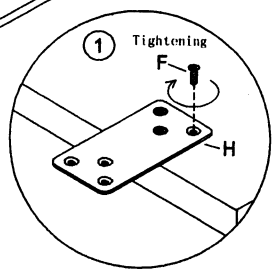


d

STEP3

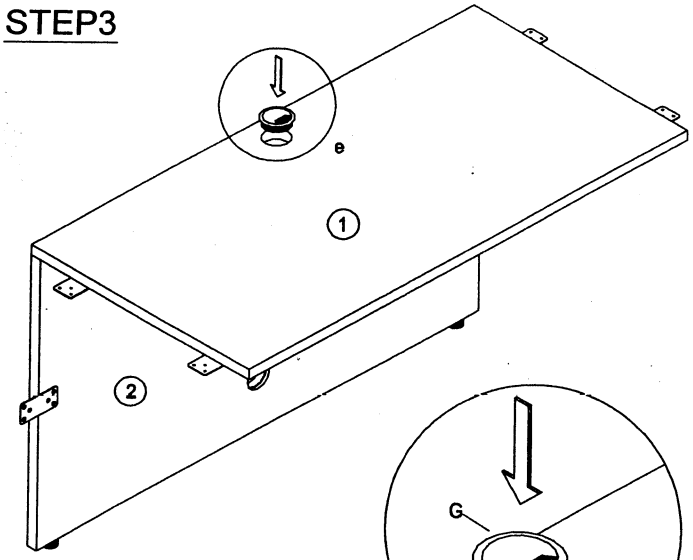

e

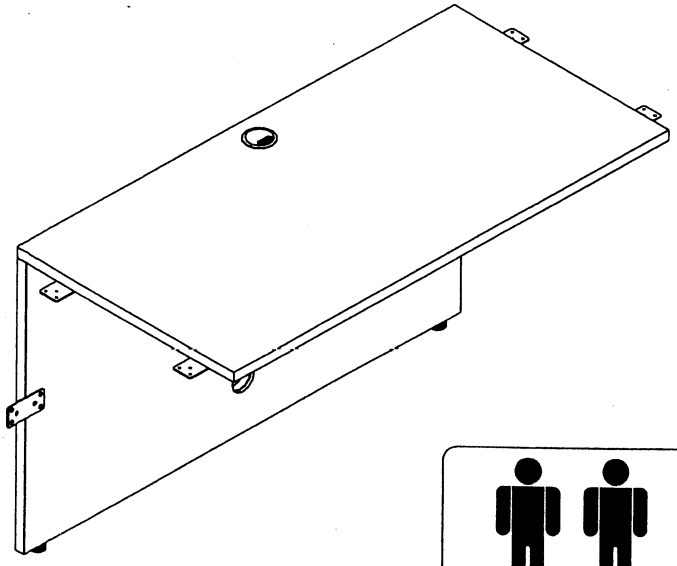

COMPLETED ASSEMBLY



IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.


Assembly Instructions

MODEL NO.:N143

CREDENZA SHELL

TUN010CL	TUN011KC		TUN021AG	TUN013LB	TUN018SC	TUN015BG
A  Cam Lock 12Pcs+2Pcs(spare)	B  Klix Cam 12PCS+2Pcs(spare)	C  Dowel 9Pcs+2Pcs(spare)	D  Adjustable Glide 4Pcs	E  6 Hole L-Bracket 5Pcs	F  Screw #4*5/8" 30Pcs+5Pcs(spare)	G  80mm Black Grommet 2Pcs

STEP1

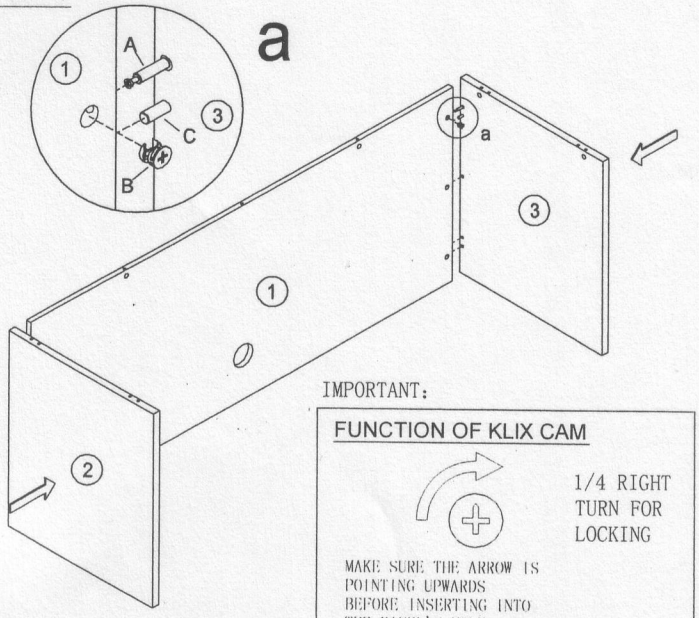


IMPORTANT:


FUNCTION OF KLIX CAM

1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL'S HOLE.

STEP2

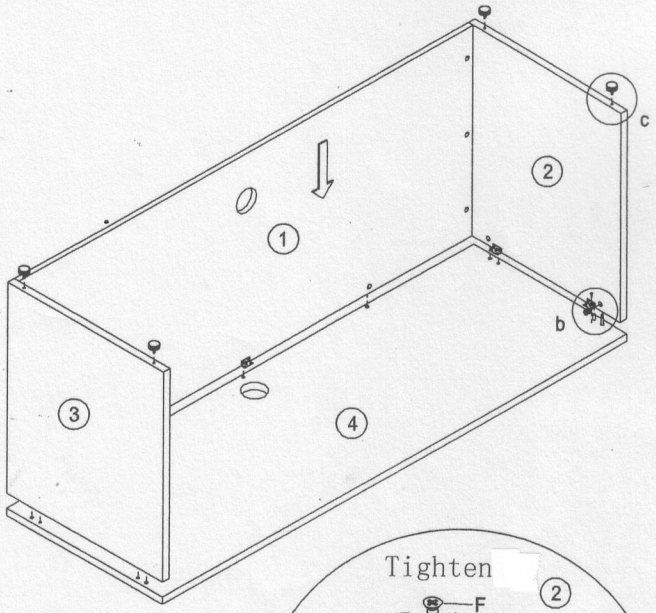

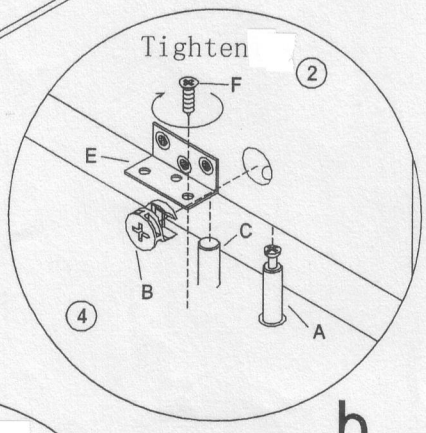


b

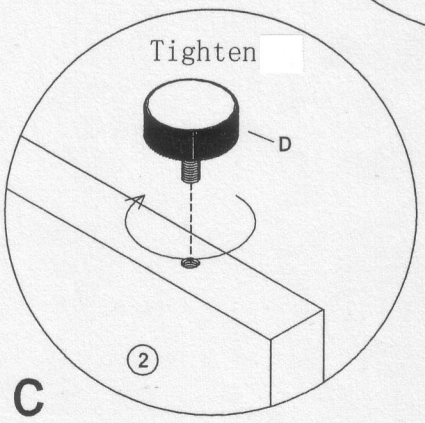


c

STEP3

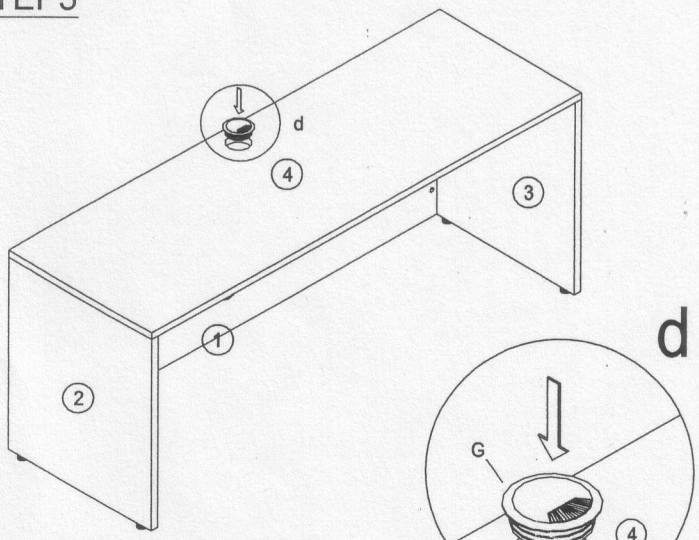

d

COMPLETED ASSEMBLY

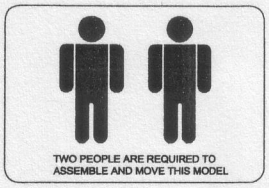


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.


ASSEMBLY INSTRUCTIONS
MODEL N144-HUTCH WITH DOORS

OMPONENTS:

(1) BACK PANEL
(2) CENTER SHELF
(3) SHELF DIVIDER
(4) SIDE PANEL
(5) SIDE PANEL
(6) TOP PANEL
(7) DOORS
(8) TACK BOARD

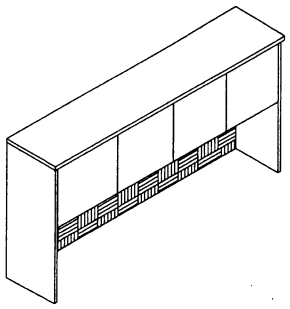


STEP ONE:

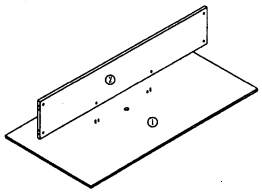

PLACE BACK PANEL (1) ON FLAT SURFACE AND INSTALL CAM LOCKS (A) AND DOWELS ©
INSTALL CAM LOCKS (A) AND DOWELS(C) INTO CENTER SHELF (2) AND AFFIX TO BACK PANEL (1) WITH KLIX CAMS (B) AS DIRECTED. ILLUSTRATION (a).

STEP TWO:

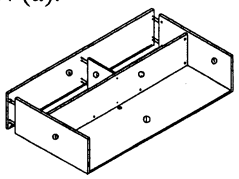


LOCATE SHELF DIVIDER (3) AND PLACE SCREWS (G) INTO CENTER SHELF (2) DO NOT TIGHTEN SEE ILLUSTRATION ©

INSTALL CAM LOCKS (A) AND DOWELS (C) INTO SIDES PANEL (4) AND (5) AFFIX TO BACK PANEL (1) AND CENTER SHELF WITH KLIX CAMS (B) AS DIRECTED (b)

INSTALL CAM LOCKS (A) AND DOWELS (C) INTO TOP PANEL (6) THEN AFFIX TO SIDES PANEL (4) AND (5), AND SHELF DIVIDER (3) WITH KLIX CAM (B)


TIGHTEN SCREWS (G) THROUGH CENTER SHELF (2) INTO SHELF DIVIDER (3). ILLUSTRATION (c)

STEP THREE:

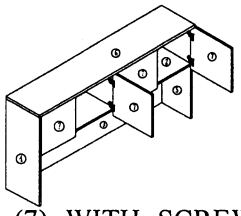

INSTALL CENTER DOOR HINGES (D) TO INTERIOR DOORS (7) WITH SCREWS (H) AS ILLUSTRATION (d) AND EXTERIOR DOORS (7) WITH SIDE DOOR HINGES (E) WITH SCREWS(H). SEE DETAIL X-X FOR ALIGNMENT.

STEP FOUR:


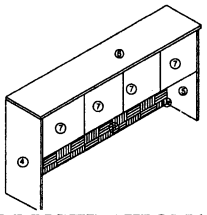


INSTALL TACK BOARD INTO THE BACK WITH SCREWS (I) AS ILLUSTRATION(e). INSTALL GROMMET (F) INTO BACK PANEL (1).


Assembly Instructions


MODEL NO.:N166

BOX/FILE PEDESTAL

TUN030AG	TUN005MH	TUN001FC	TUN002AB	
A  Adjustable Glide 4 Pcs	B  32mm Metal Scallop Shape Handle 3 Sets	C  File Clip 2 Pcs+1 Pc(spare)	D  300*16*3mm Aluminium Bar 1 Pcs	E  Keys 1 Set


STEP1

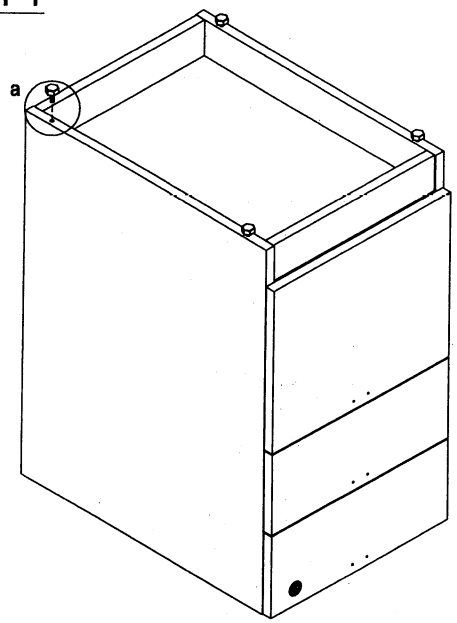


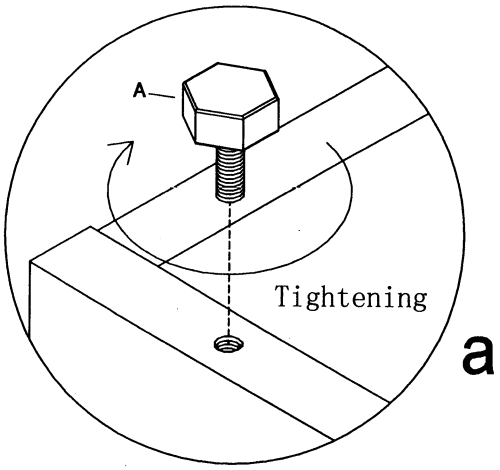


a

STEP2

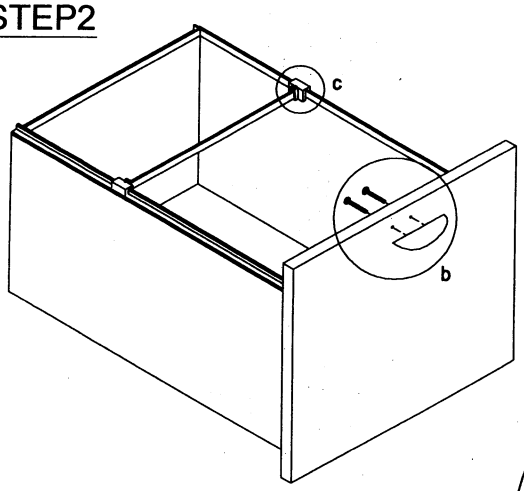


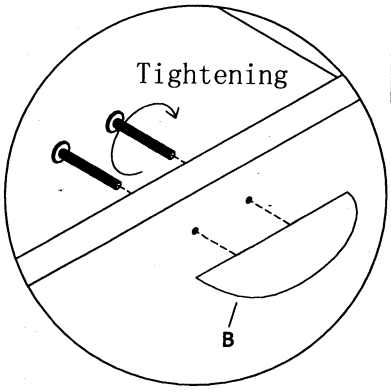

b

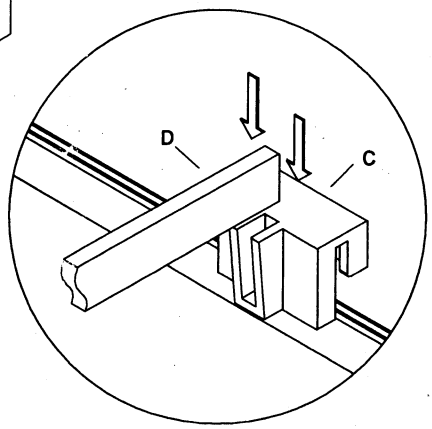

c

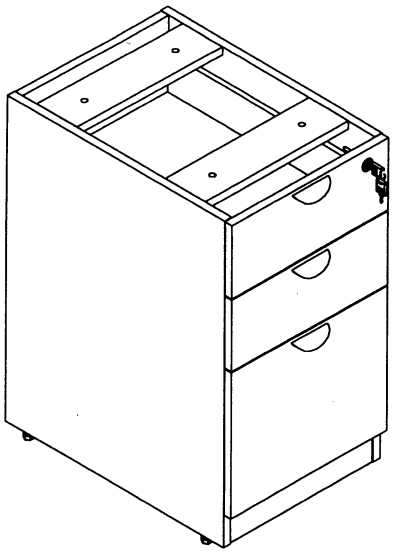

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.