



Assembly Instructions

MODEL NO.N102

DESK SHELL

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	
A  Cam lock 14Pcs+1Pc(spare)	B  Klix Cam 14Pcs+1Pc(spare)	C  Cam Cover 14Pcs+1Pc(spare)	D  Dowel 9Pcs+1Pc(spare)	E  Adjustable Glide 4Pcs	F  6Hole L-Bracket 5Pcs	G  Screw#4*5/8" 30Pcs+1Pc(spare)	H  60mm Black Grommet 2 Pcs	I  Cover 4Pcs+1Pc(Spare)

STEP1

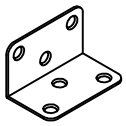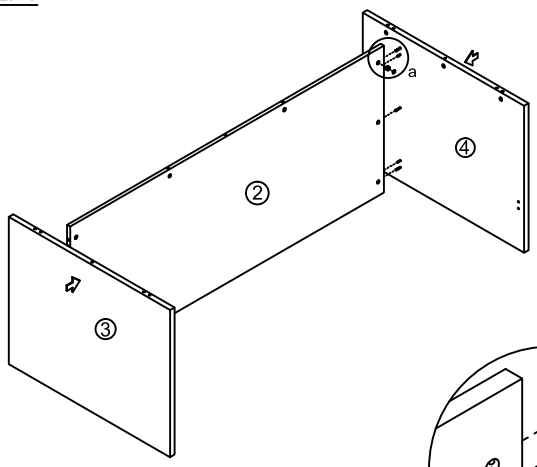


IMPORTANT:
FUNCTION OF KLIX CAM




1/4 RIGHT TURN FOR LOCKING


Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole

STEP2

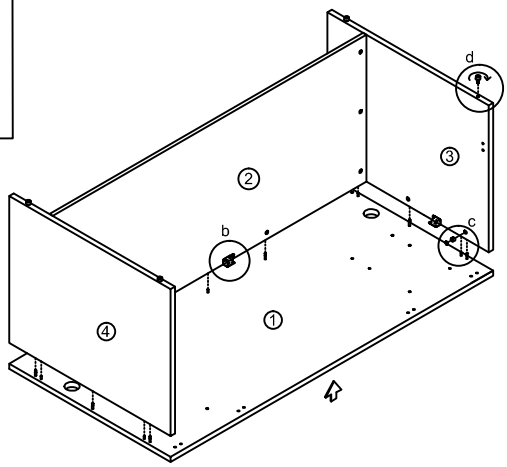

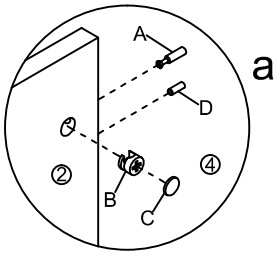


STEP3

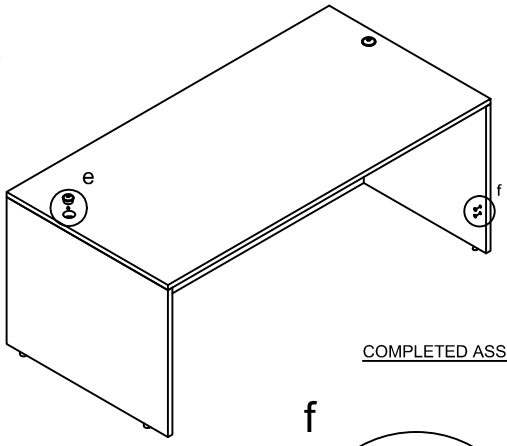


COMPLETED ASSEMBLY


b

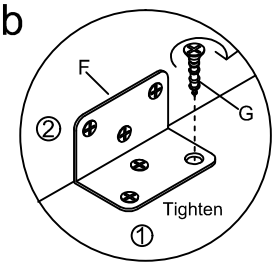


c

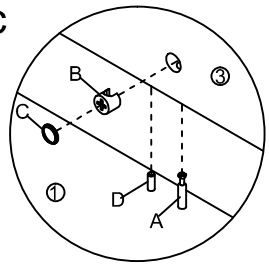


e

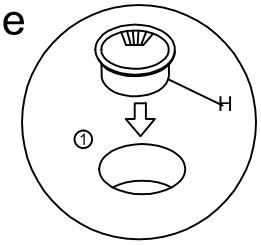


f

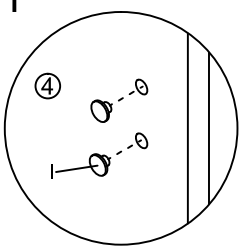

d

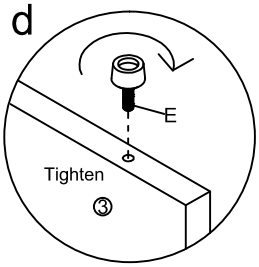

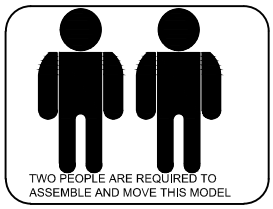

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com


Assembly Instructions

MODEL NO.:N196

Return

TUN010CL	TUN010KL		TUN026	TUN021AG	TUN013LB	TUN016SC	TUN019IB			TUN016BG	
A	B	C	D	E	F	G	H	I	J	K	L
Cam lock 7Pcs+1Pc(spare)	Klix Cam 7Pcs+1Pc(spare)	Cam Cover 7Pcs+1Pc(spare)	Dowel 8Pcs+1Pc(spare)	Adjustable Glide 4 Pcs	6Hole L-Bracket 8Pcs	screw#1*12 13Pcs	I-Bracket 8Pcs	Cover 8Pcs	Cover 8Pcs	60mm Black Grommet 2 Pcs	6#*12 screw 13Pcs

STEP1

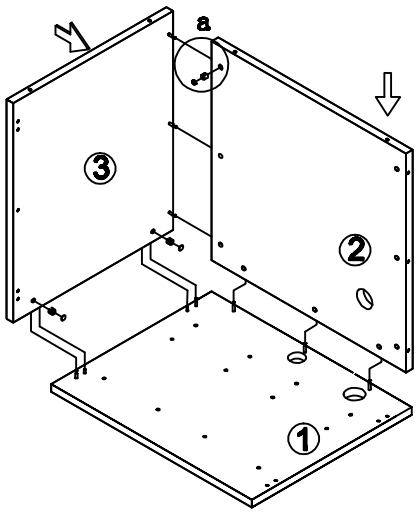


IMPORTANT:

FUNCTION OF KLIX CAM




1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POING UPWARDS BEFORE INSERTING INTO THE PANELS HOLE

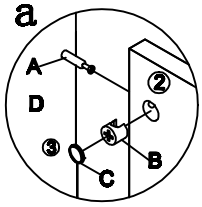



STEP2

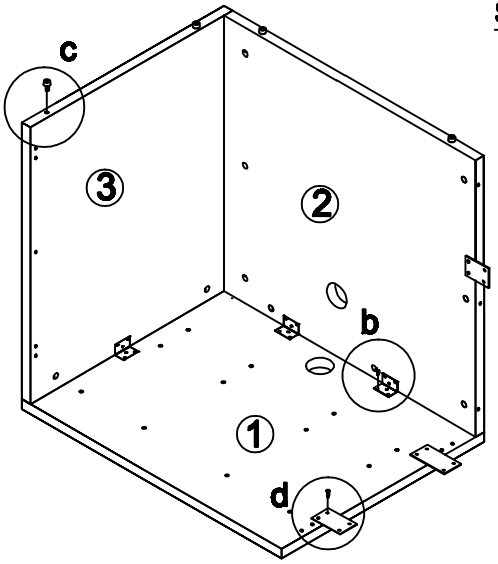


STEP3

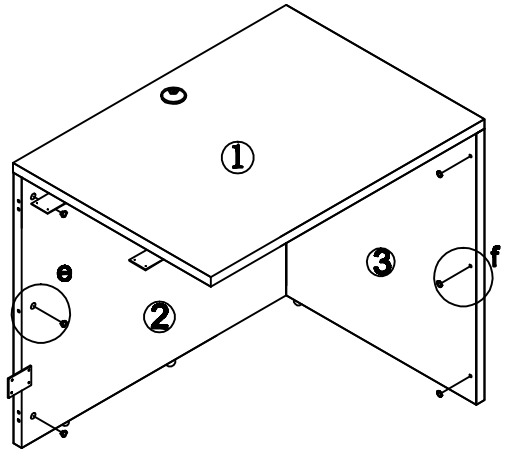


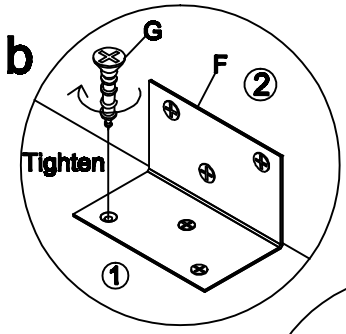


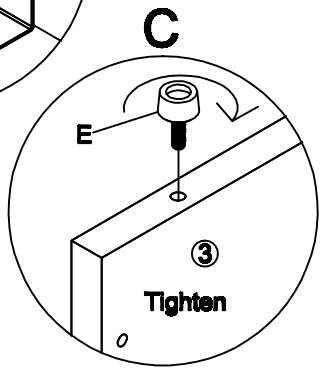


COMPLETED ASSEMBLY

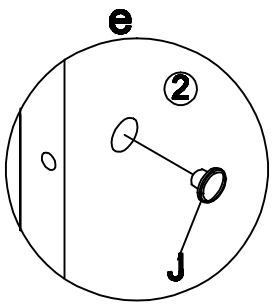

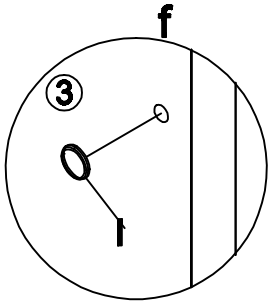

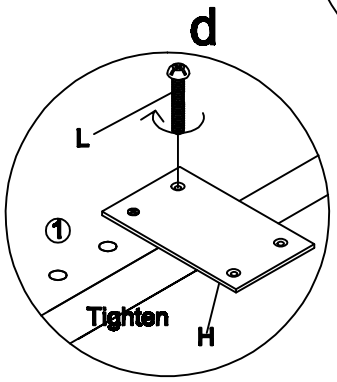

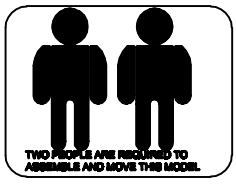



IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children


Assembly Instructions


MODEL NO.:N166

BOX/FILE PEDESTAL

TUN030AG	TUN005MH	TUN001FC	TUN002AB	
A  Adjustable Glide 4 Pcs	B  32mm Metal Scallop Shape Handle 3 Sets	C  File Clip 2 Pcs+1 Pc(spare)	D  300*16*3mm Aluminium Bar 1 Pcs	E  Keys 1 Set


STEP1

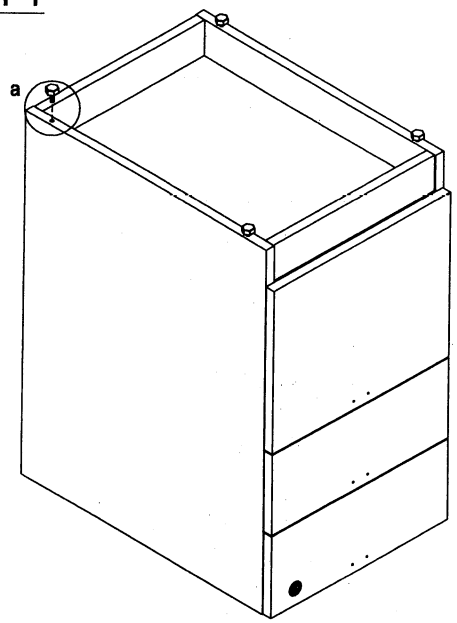


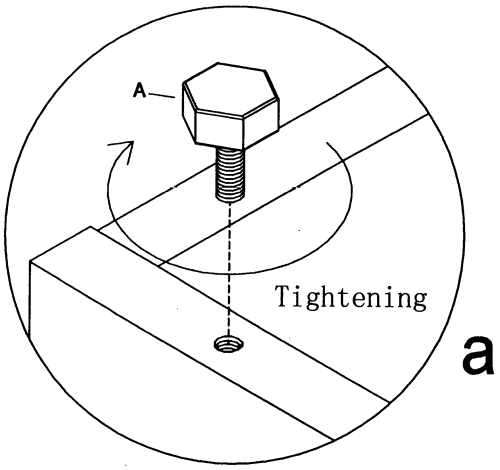


a

STEP2

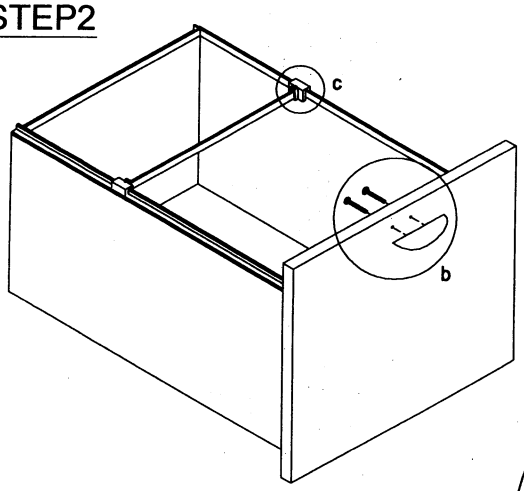


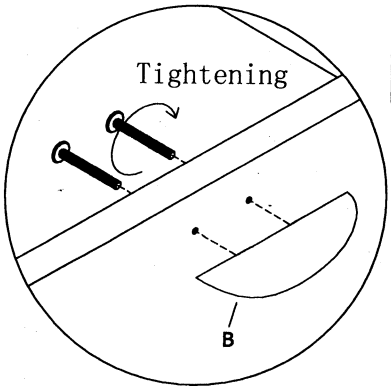

b

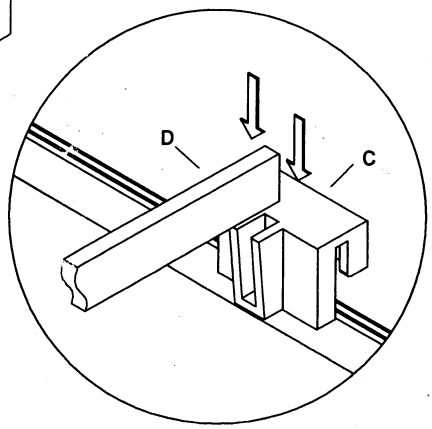

c

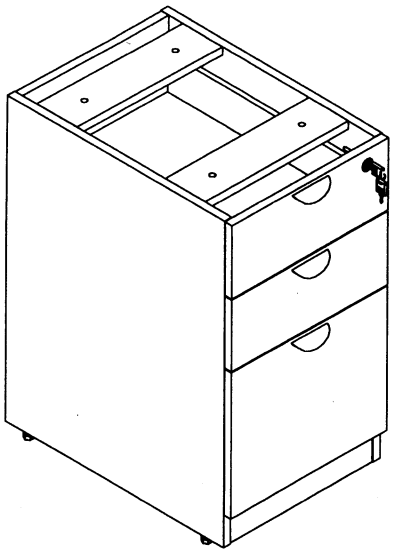

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.