



Assembly Instructions

MODEL NO.N101

DESK SHELL

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	
A	B	C	D	E	F	G	H	I
								
Cam lock 14Pcs+1Pc(spare)	Klix Cam 14Pcs+1Pc(spare)	Cam Cover 14Pcs+1Pc(spare)	Dowel 9Pcs+1Pc(spare)	Adjustable Glide 4Pcs	6Hole L-Bracket 5Pcs	Screw#4*5/8" 30Pcs+1Pc(spare)	60mm Black Grommet 2 Pcs	Cover 4Pcs+1Pc(Spare)

STEP1

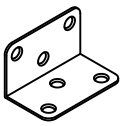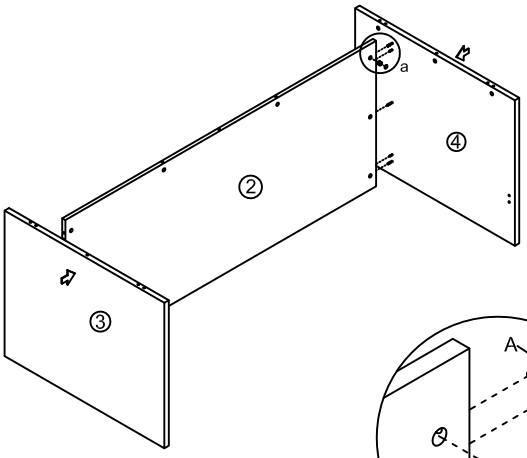


IMPORTANT:
FUNCTION OF KLIX CAM




1/4 RIGHT
TURN FOR
LOCKING


Make Sure The Arrow Is
Pointing Upwards Before
Inserting Into The Panel's Hole

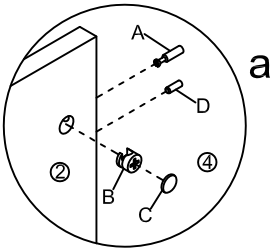

STEP2

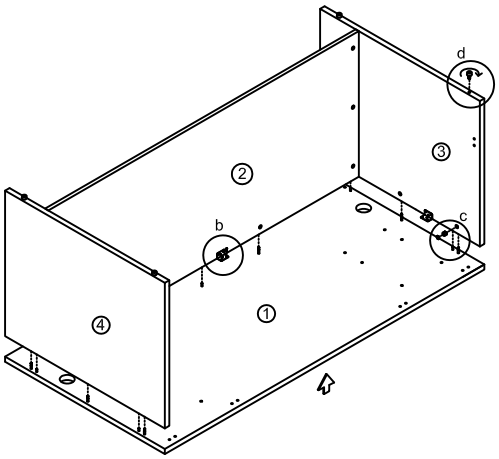


STEP3

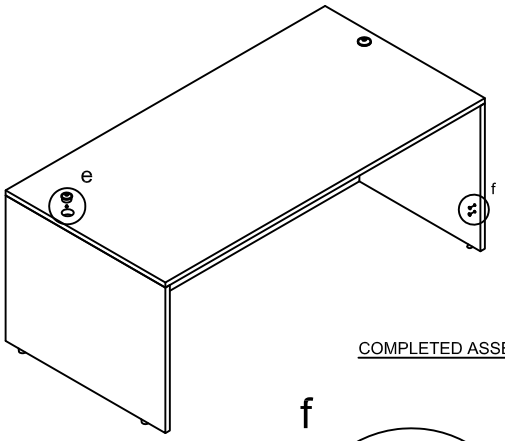


COMPLETED ASSEMBLY


b

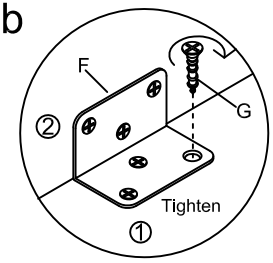


c

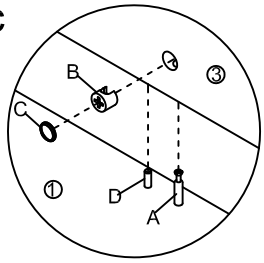


e

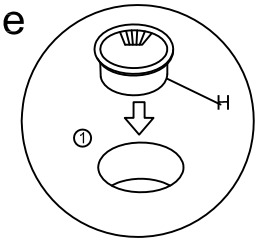


f

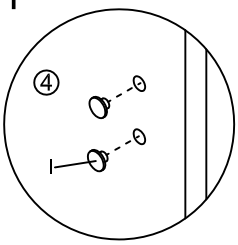

d

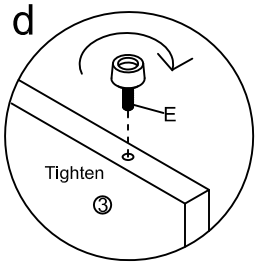

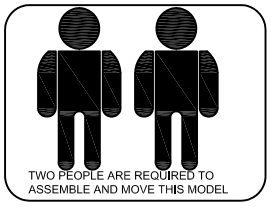

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com

Assembly Instructions

MODEL NO.:N145

RETURN-REVERSIBLE

TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	TUN019IB	
A	B	C	D	E	F	G	H	I
Cam Lock 7Pcs+2Pcs(spare)	Klix Cam 7Pcs+2Pcs(spare)	Dowel 5Pcs+1Pc(spare)	Adjustable Glide 4Pcs	6 Hole L-Bracket 2Pcs	Screw #4*5/8" 30Pcs+5Pcs(spare)	60mm Black Grommet 2Pcs	I-Bracket 3Pcs	Sticker 20Pcs


STEP1

IMPORTANT:


FUNCTION OF KLIX CAM

1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL'S HOLE.

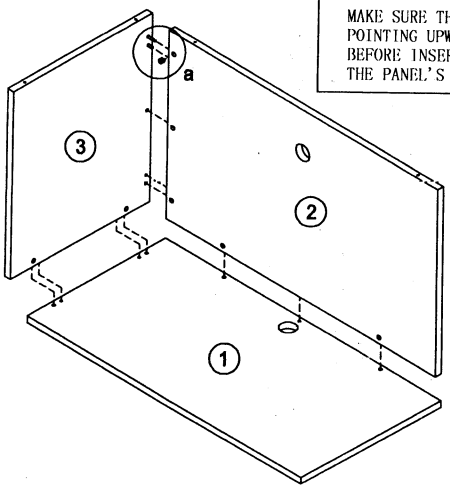


a

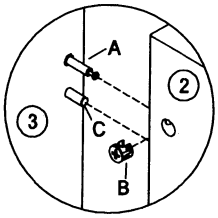


STEP2

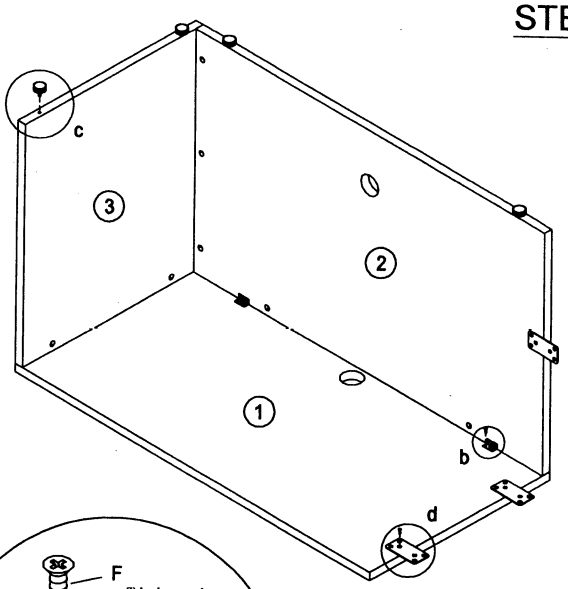

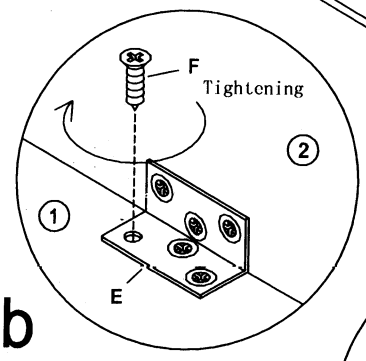


b

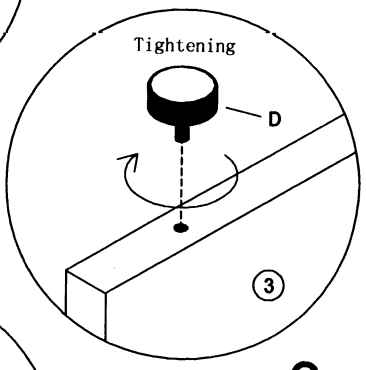


c


STEP3

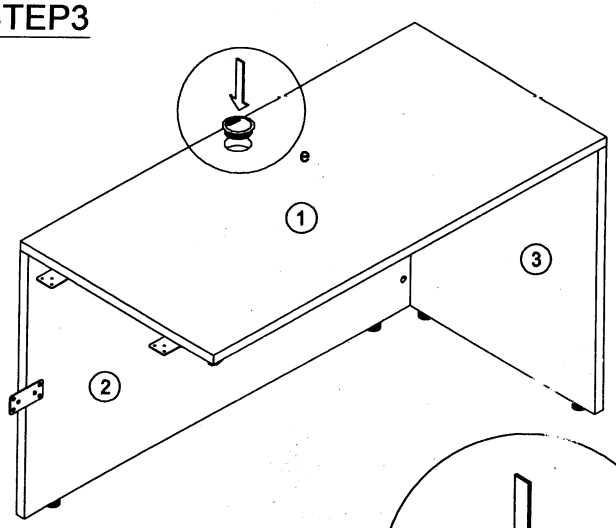


e

COMPLETED ASSEMBLY

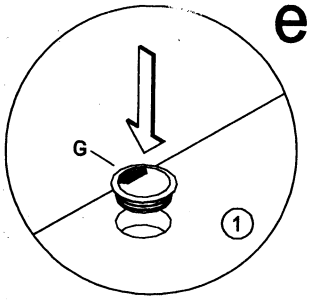

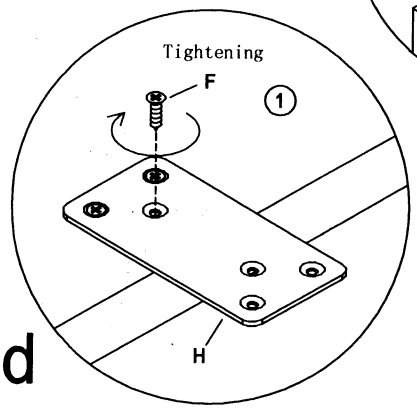

d

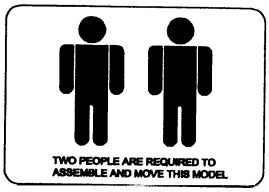



IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.


Assembly Instructions


MODEL NO.:N166

BOX/FILE PEDESTAL

TUN030AG	TUN005MH	TUN001FC	TUN002AB	
A  Adjustable Glide 4 Pcs	B  32mm Metal Scallop Shape Handle 3 Sets	C  File Clip 2 Pcs+1 Pc(spare)	D  300*16*3mm Aluminium Bar 1 Pcs	E  Keys 1 Set


STEP1

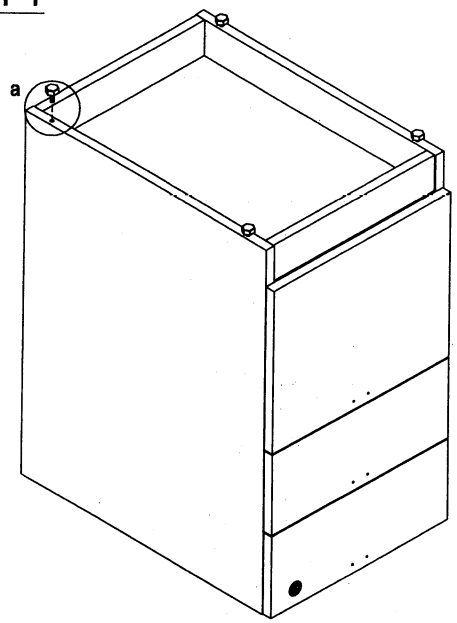


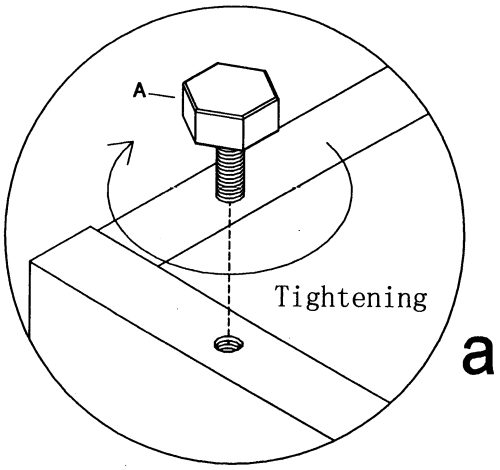


a

STEP2

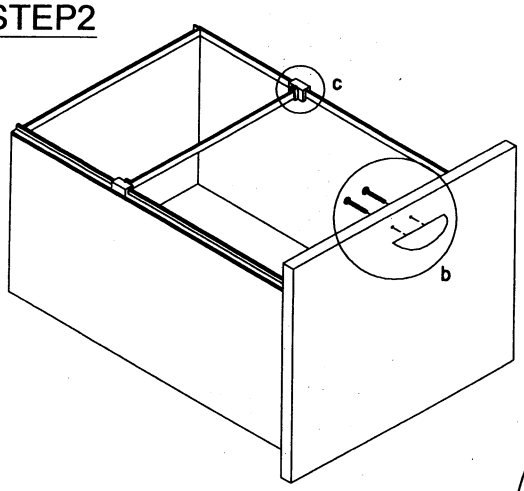


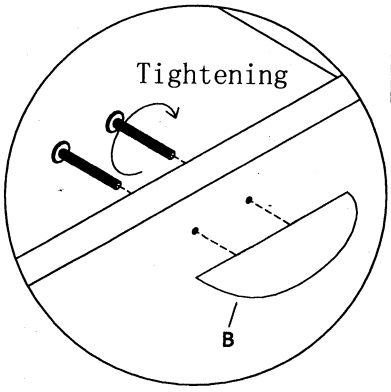

b

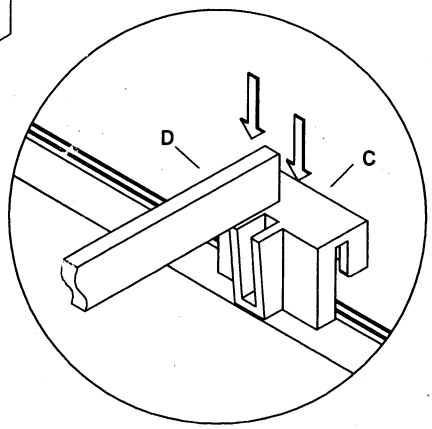

c

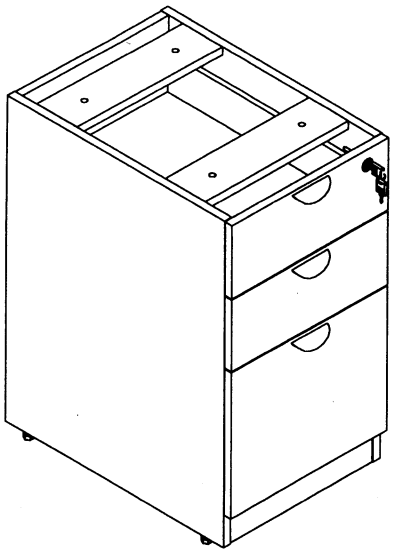

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.