



Assembly Instructions

MODEL NO.N102

DESK SHELL

TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	
A  Cam lock 14Pcs+1Pc(spare)	B  Klix Cam 14Pcs+1Pc(spare)	C  Cam Cover 14Pcs+1Pc(spare)	D  Dowel 9Pcs+1Pc(spare)	E  Adjustable Glide 4Pcs	F  6Hole L-Bracket 5Pcs	G  Screw#4*5/8" 30Pcs+1Pc(spare)	H  60mm Black Grommet 2 Pcs	I  Cover 4Pcs+1Pc(Spare)

STEP1

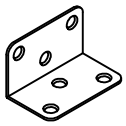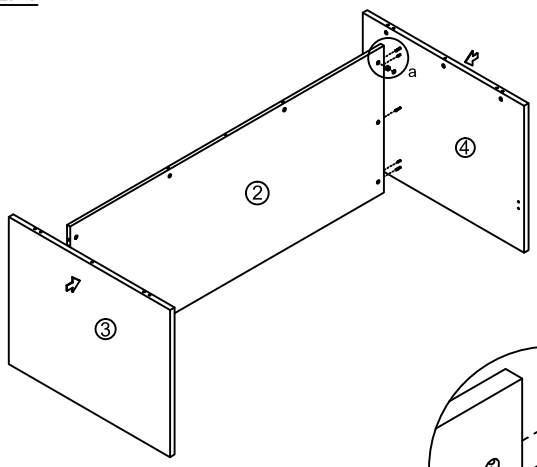


IMPORTANT:
FUNCTION OF KLIX CAM




1/4 RIGHT TURN FOR LOCKING


Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole

STEP2

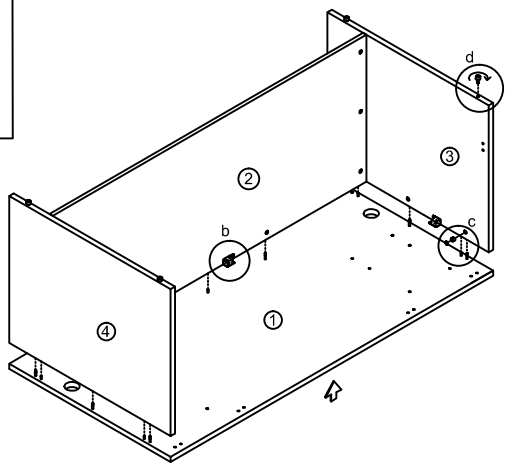

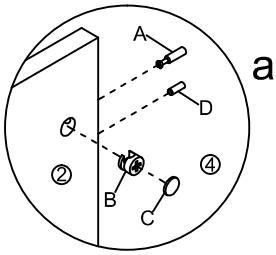


STEP3

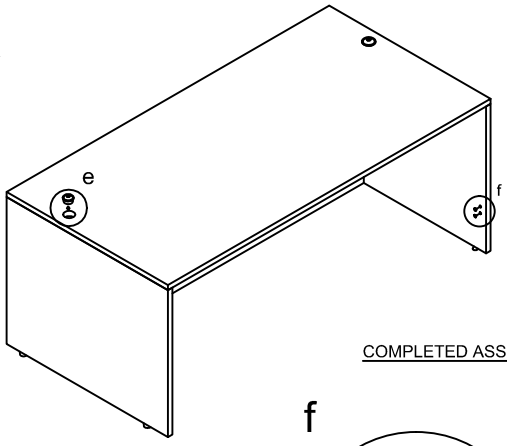


COMPLETED ASSEMBLY


b

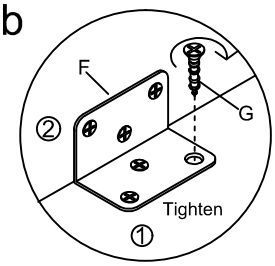


c

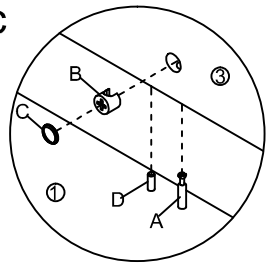


e

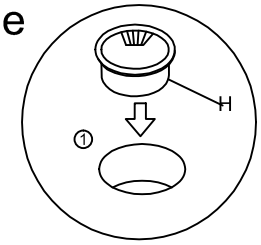


f

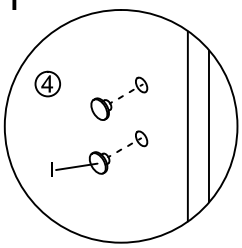

d

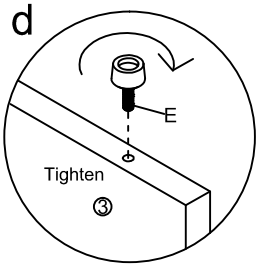

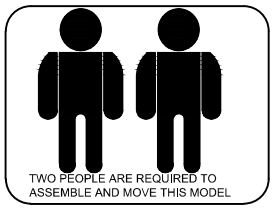




IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com


Assembly Instructions


MODEL NO.:N170

BRIDGE


TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	TUN019IB
A  Cam Lock 4Pcs+1Pc(spare)	B  Klix Cam 4Pcs+1Pc(spare)	C  Dowel 2Pcs+1Pc(spare)	D  Adjustable Glide 2Pcs	E  6 Hole L-Bracket 2Pcs	F  Screw #4*5/8" 48Pcs+7Pcs(spare)	G  80mm Black Grommet 2Pcs	H  I-Bracket 6Pcs

STEP1

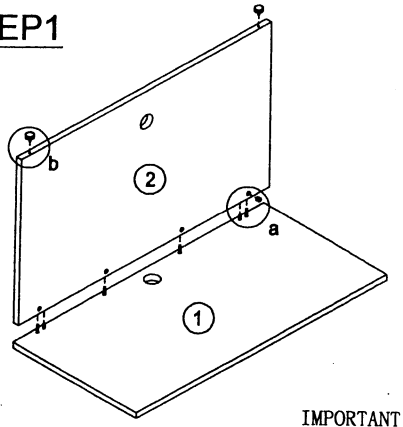

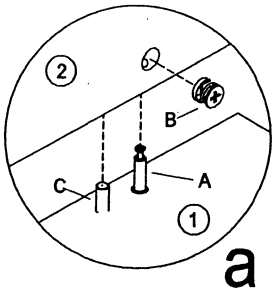


a

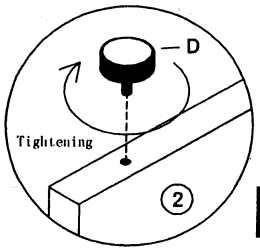

b

IMPORTANT:


FUNCTION OF KLIX CAM




1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL'S HOLE.

STEP2

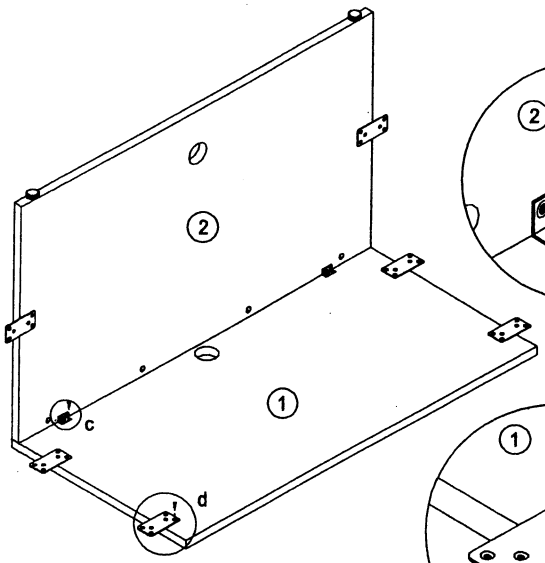

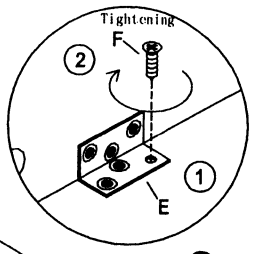


c

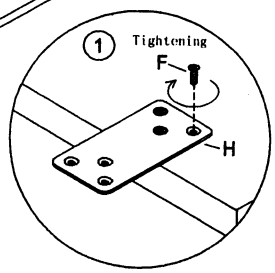


d

STEP3

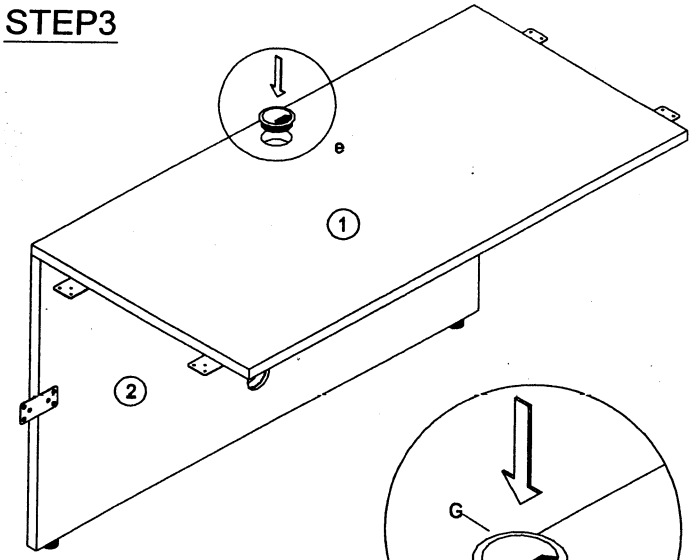

e

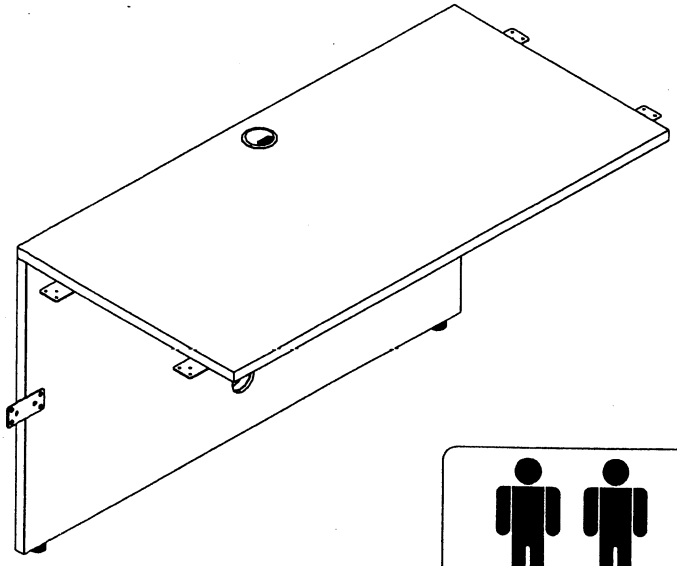

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.


Assembly Instructions

MODEL NO.:N111

CREDENZA SHELL

TUN010CL	TUN010KL		TUN026	TUN021AG	TUN013LB	TUN018SC
A  Camlock 12Pcs+1Pc(spare)	B  Klix Cam 12Pcs+1Pc(spare)	C  Cam Cover 12Pcs+1Pc(spare)	D  Dowel 9Pcs+1Pc(spare)	E  Adjustale Glide 4 Pcs	F  6Hole L-Bracket 5Pcs	G  screw#4 30Pcs+4Pc(spare)

STEP1

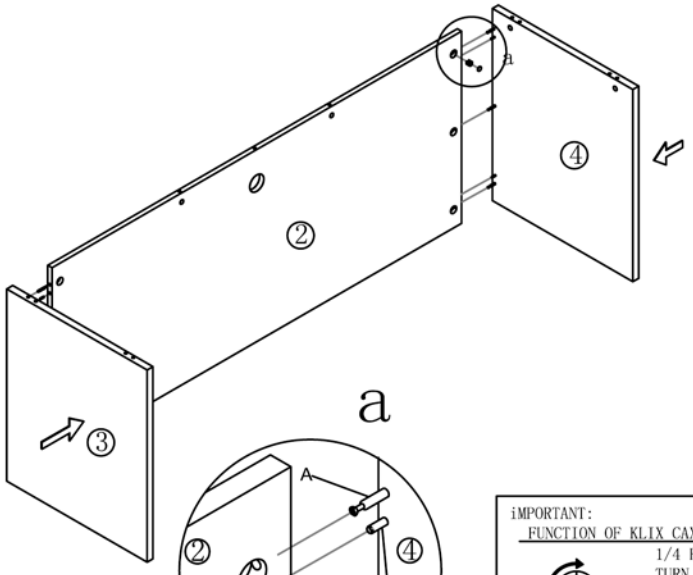



iMPORTANT:
FUNCTION OF KLIX CAX
1/4 RIGHT TURN FOR LOCKING





MAKE SURE THE ARROW IS POING UPWARDS BEFORE INSERTING INTO THE PANELS HOLE

STEP2

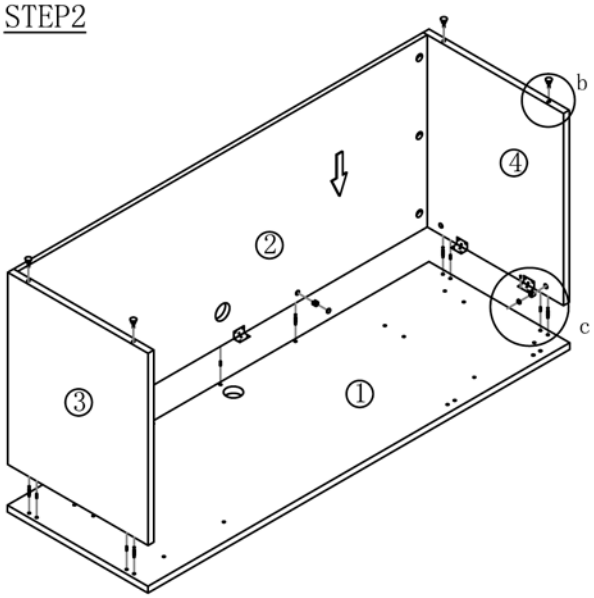


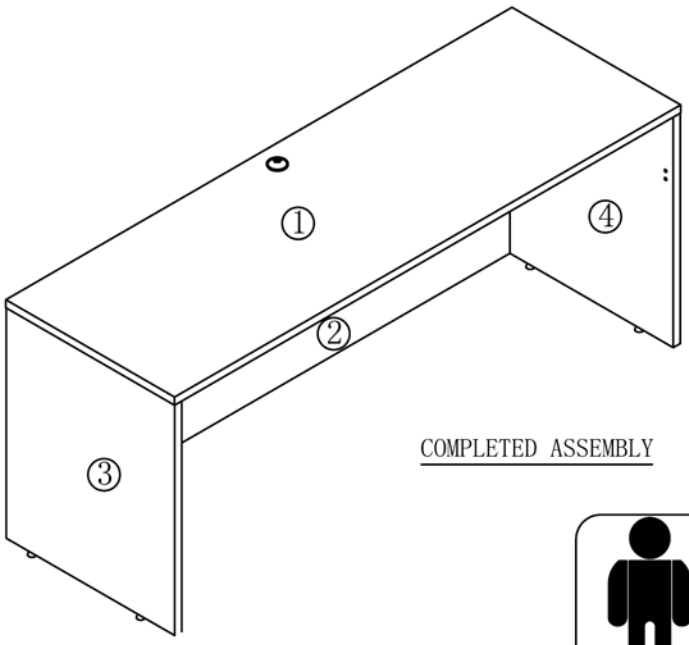

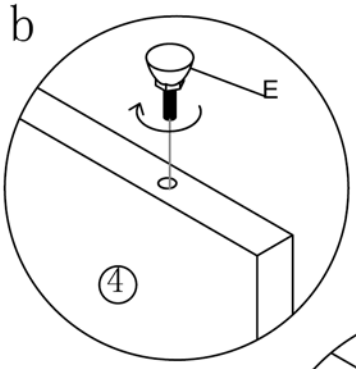

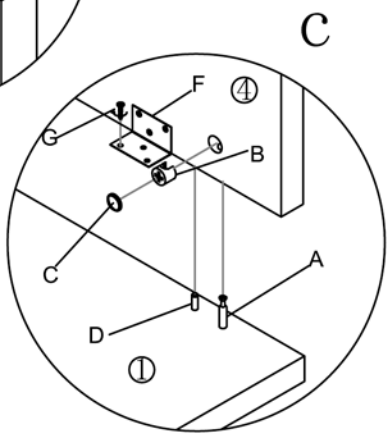

COMPLETED ASSEMBLY

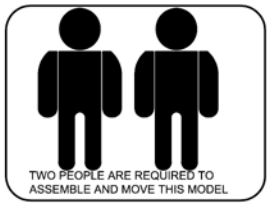

TWO PEOPLE ARE REQUIRED TO ASSEMBLE AND MOVE THIS MODEL

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children


ASSEMBLY INSTRUCTIONS

MODEL N140-HUTCH WITH DOORS

COMPONENTS:

(1) BACK PANEL
(2) CENTER SHELF
(3) SHELF DIVIDER
(4) SIDE PANEL
(5) SIDE PANEL
(6) TOP PANEL
(7) DOORS
(8) TACK BOARD

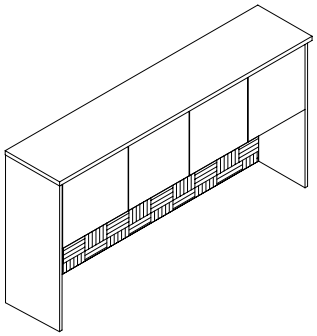


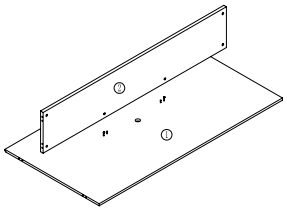

STEP ONE:

PLACE BACK PANEL (1) ON FLAT SURFACE AND INSTALL CAM LOCKS (A) AND DOWELS ©

INSTALL CAM LOCKS (A) AND DOWELS(C) INTO CENTER SHELF (2) AND AFFIX TO BACK PANEL (1) WITH KLIX CAMS (B) AS DIRECTED. SEE ILLUSTRATION (a).

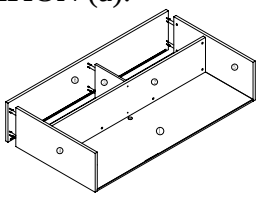


STEP TWO:

LOCATE SHELF DIVIDER (3) AND PLACE SCREWS (G) INTO CENTER SHELF (2) DO NOT TIGHTEN. SEE ILLUSTRATION ©

INSTALL CAM LOCKS (A) AND DOWELS (C) INTO SIDE PANELS (4) AND (5) AFFIX TO BACK PANEL (1) AND CENTER SHELF WITH KLIX CAMS (B) AS DIRECTED (b)


INSTALL CAM LOCKS (A) AND DOWELS (C) INTO TOP PANEL (6) THEN AFFIX TO SIDE PANELS (4) AND (5), AND SHELF DIVIDER (3) WITH KLIX CAM (B)

TIGHTEN SCREWS (G) THROUGH CENTER SHELF (2) INTO SHELF DIVIDER (3). SEE ILLUSTRATION (c)

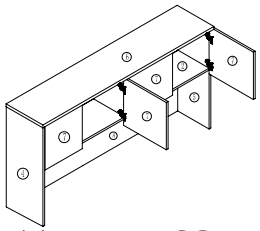

STEP THREE:

INSTALL CENTER DOOR HINGES (D) TO INTERIOR DOORS (7) WITH SCREWS (H) AS ILLUSTRATION (d) AND EXTERIOR DOORS (7) WITH SIDE DOOR HINGES (E) WITH SCREWS(H). SEE DETAIL X-X FOR ALIGNMENT.

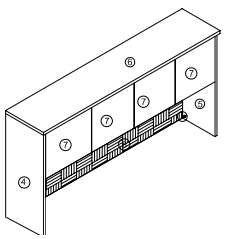




STEP FOUR:

INSTALL TACK BOARD INTO THE BACK WITH SCREWS (I) AS ILLUSTRATION(e). INSTALL GROMMET (F) INTO BACK PANEL (1).


Assembly Instructions

MODEL NO.:N140


HUTCH WITH DOORS

TUX010CL	TUX011KL		TUN026	TUN022DH	TUN023DH	TUN017SC	TUN018SC	TUN018SC	TUN016BG
A  Cam lock 18Pcs+2Pcs(spare)	B  Klix Cam 18Pcs+2Pcs(spare)	C  Cam Cover 18Pcs+2Pcs(spare)	D  Dowel 17Pcs	E  Center door hinge 4Pcs	F  Side Door Hinge 4Pcs	G  JCBC Black Grommet 2Pcs	H  Screw #4*1" 32Pcs+1Pcs(spare)	I  Screw #4 tack bonad 6Pcs+1Pcs(spare)	J  35mm Black Grommet 1Pcs

STEP1

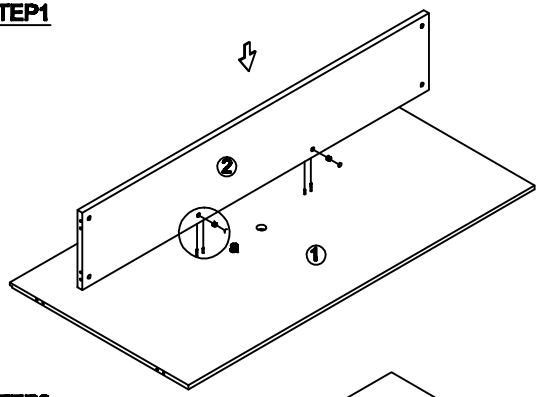

a

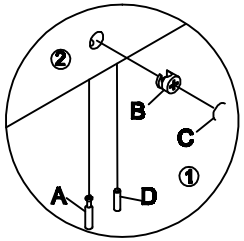


IMPORTANT:
FUNCTION OF KLIX CAM



1/4 RIGHT TURN FOR LOCKING


MAKE SURE THE ARROW IS POING UPWARDS BEFORE INSERTING INTO THE PANELS HOLE

STEP2

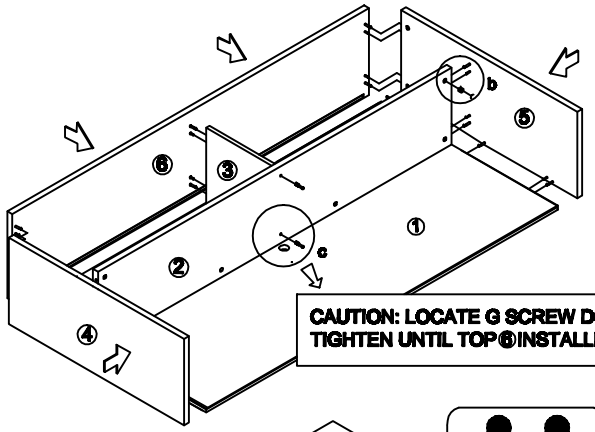


CAUTION: LOCATE G SCREW DO NOT TIGHTEN UNTIL TOP⑥INSTALLED


b

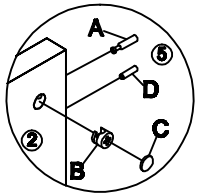


c

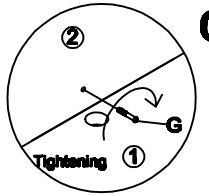

STEP3

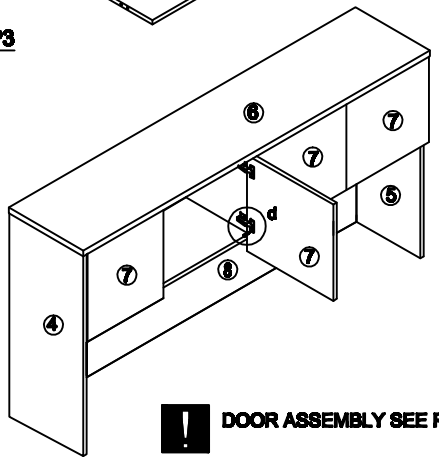


d

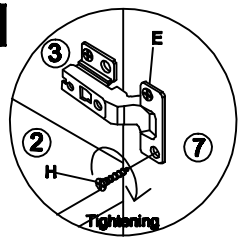


! DOOR ASSEMBLY SEE PAGE THREE

STEP4

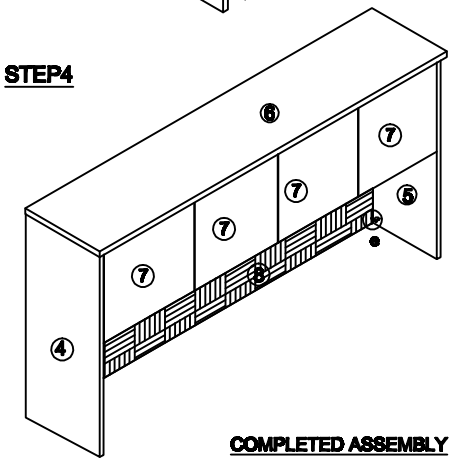



e

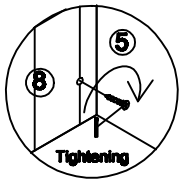

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

Assembly Instructions


MODEL NO.:N140

HUTCH WITH DOORS

Please note that hinges for side/center doors are different:

1. Do not mix bag #E & #F


2. Assemble side doors first, then assemble the center doors.

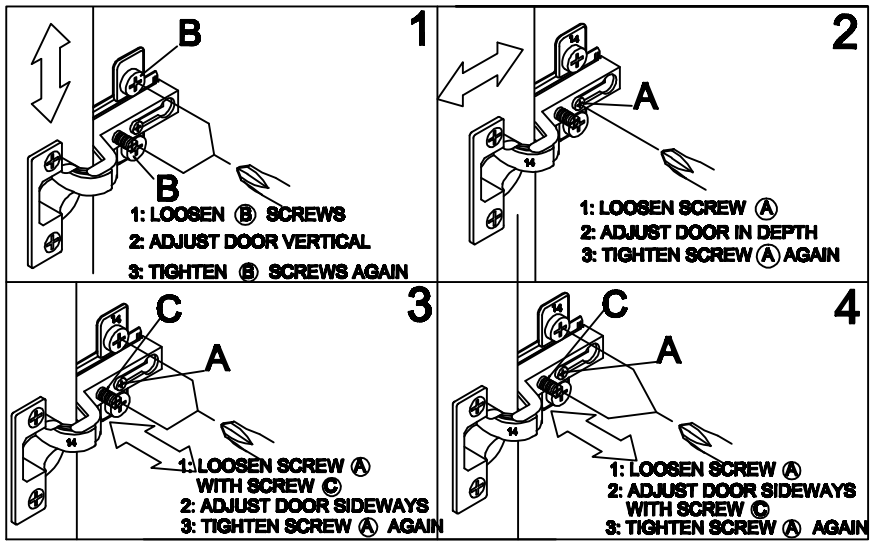


ATTENTION!

These hinges are for **Left/Right Side Doors** assembly only.

F

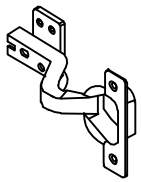


The hinges are goose-neck type for Left/Right sides

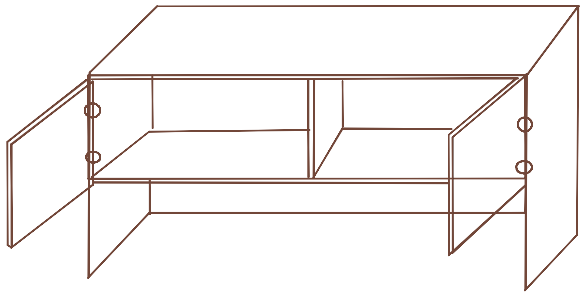


ATTENTION!

These hinges are for **Center Doors** assembly only.

E

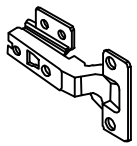



The hinges are straight type for center doors

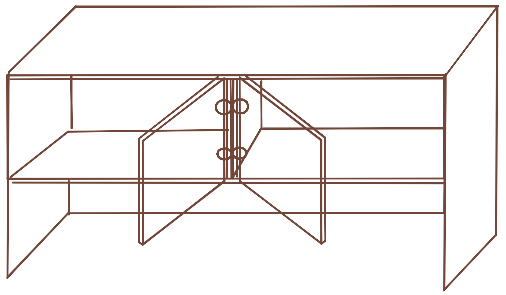


Assembly Instructions


MODEL NO.:N166

BOX/FILE PEDESTAL

TUN030AG	TUN005MH	TUN001FC	TUN002AB	
A  Adjustable Glide 4 Pcs	B  32mm Metal Scallop Shape Handle 3 Sets	C  File Clip 2 Pcs+1 Pc(spare)	D  300*16*3mm Aluminium Bar 1 Pcs	E  Keys 1 Set


STEP1

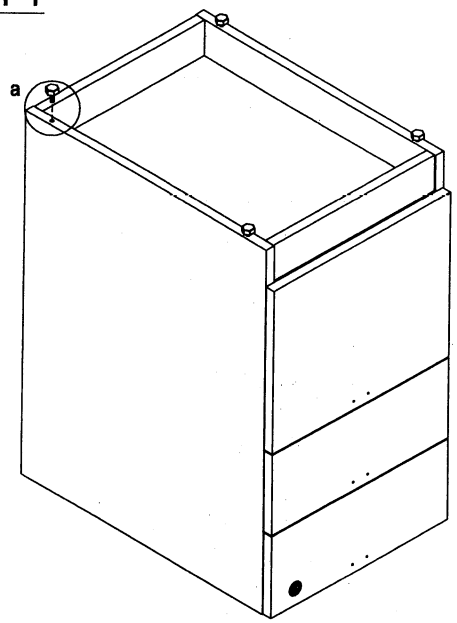


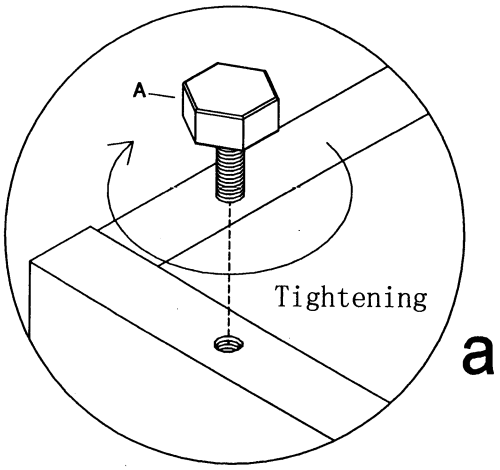


a

STEP2

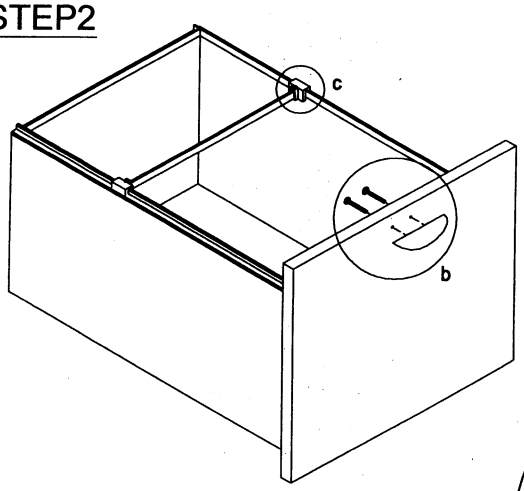


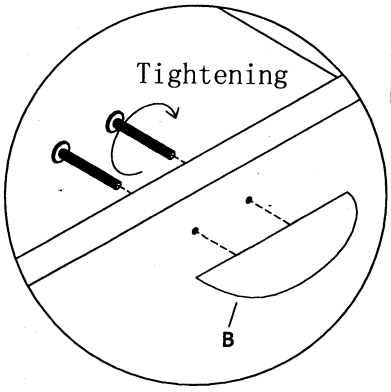

b

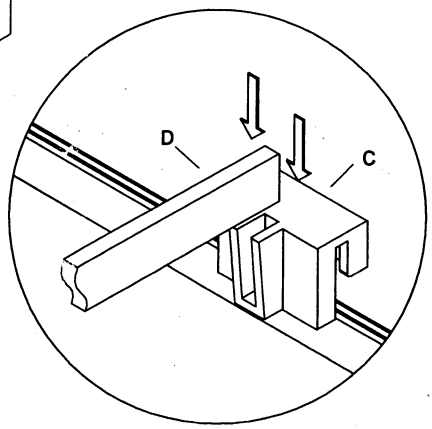

c

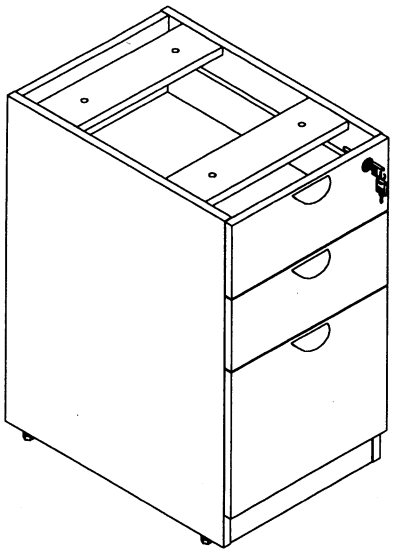

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.